


## STRATY CIŚNIENIA

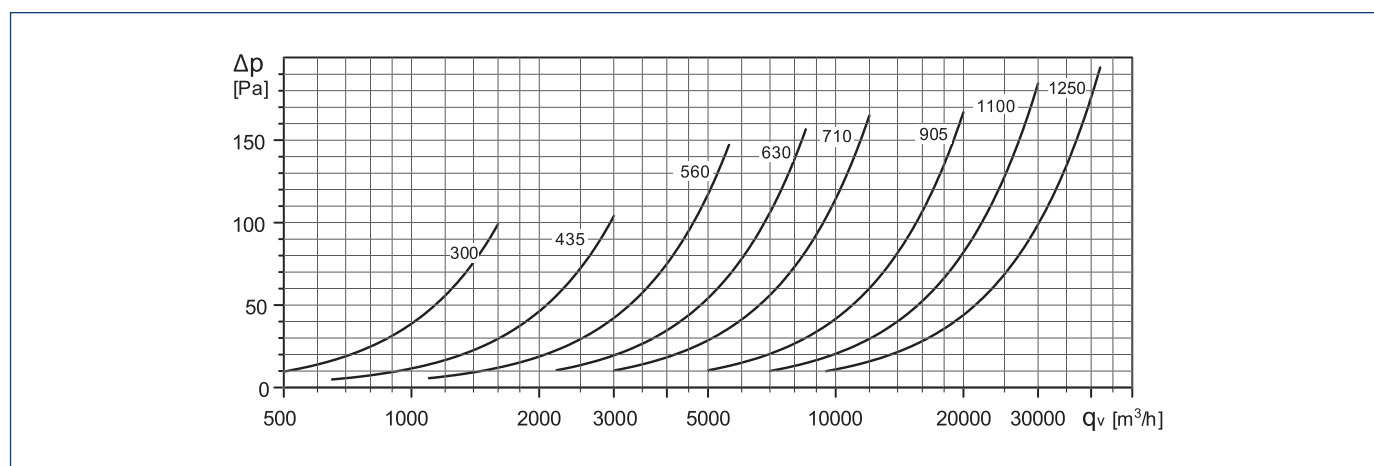

## Złącze JPA/P


- używane do montażu akcesoriów (JCA/KZD, JBR/K, JAE/ZPD)
- pozwalają na demontaż i montaż wentylatorów bez konieczności demontażu przewodu przyłączeniowego



www



| Typ  | □B   | □C  | ØD   | n x t  | ØH   |
|------|------|-----|------|--------|------|
| 300  | 289  | 245 | 182  | 4xM6   | 205  |
| 435  | 419  | 330 | 252  | 4xM8   | 280  |
| 560  | 544  | 450 | 358  | 8xM8   | 395  |
| 630  | 614  | 535 | 403  | 8xM10  | 450  |
| 710  | 694  | 590 | 503  | 12xM10 | 560  |
| 905  | 884  | 750 | 633  | 12xM10 | 690  |
| 1100 | 1079 | 840 | 713  | 16xM10 | 770  |
| 1250 | 1230 | 950 | 1000 | 8xM12  | 1070 |

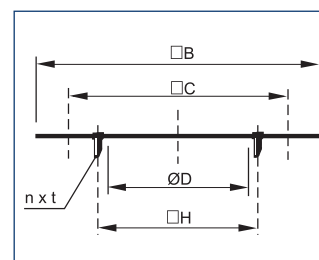

## Kłapa zwrotna JCA/KZD

- zapobiega cyrkulacji powietrza oraz strat ciepłych gdy wentylator jest wyłączony
- montaż do złącza lub bezpośrednio do podstawy wentylatora (śruby lub nity)



www



| Typ    | ØD   | E   | F   | ØH   | ØJ   |
|--------|------|-----|-----|------|------|
| 300    | 182  | 100 | 124 | 205  | 219  |
| 435    | 252  | 145 | 174 | 280  | 300  |
| 560-N  | 358  | 210 | 227 | 395  | 415  |
| 630-N  | 403  | 240 | 250 | 450  | 474  |
| 710-N  | 503  | 285 | 300 | 560  | 581  |
| 905-N  | 633  | 345 | 365 | 690  | 714  |
| 1100-N | 713  | 350 | 410 | 770  | 900  |
| 1250   | 1004 | 560 | 560 | 1070 | 1110 |

